STRÖME

Air humidifier – Model: SPS-201A

User manual in English



CE

Contents

Safety	5
Technical information	7
Parts	8
How to use	10
Place of use	10
Water and fragrance oil	10
General use	12
Settings	13
Maintenance, storage and recycling	14
Cleaning the water tank	14
Cleaning the steam sensor and pipe	15
Storage	15
Recycling	15

Safety

- Read the instructions and keep them for future reference. By following these safety instructions, you can use the appliance safely and prevent damage to the appliance or injury to persons.
- Before use, ensure that the package contains all parts listed in the technical specifications and that the appliance parts are intact. Do not use the appliance if any parts are missing or damaged.
- Do not attempt to repair the appliance parts yourself. Take the appliance to the retailer or an authorised service centre if any parts are faulty.
- Remove all protective plastics and stickers from the appliance.
- The appliance is designed for domestic use in rooms of around 20 to 25 square metres.
- The use of the appliance increases humidity, especially in the immediate vicinity of its place of use. For this reason, the appliance should not be used near objects or surfaces that are susceptible to damage by moisture. Such objects and materials include books, photographs and tapestries. Stop using the appliance immediately if it causes harmful levels of moisture in its operating environment.
- Use the appliance only in dry indoor environments at room temperature.
- Do not expose the appliance to water or other liquids.
- Do not expose the appliance to fire, direct sunlight, or other heat sources, excessive cold, or corrosive substances.
- Do not cover the appliance or its air outlet.
- Make sure that the power cord doesn't get damaged during installation. If the power cord gets damaged, contact your

retailer or an authorised service centre. Never use the appliance if its power cord is defective or damaged.


- Incorrect voltage will damage the appliance and may cause electric shock. Check the required voltage for the appliance on the product label. Use the appliance only in places where the required voltage is available.
- Do not connect the appliance to the electrical outlet until you have filled the water tank.
- Plug the appliance's power cord into an accessible socket.
- Place the appliance on a stable, level and dry surface at a sufficient distance (approx. > 50 cm) from walls and objects.
- Do not let the power cable hang over the edge of high surfaces during use or storage to avoid the appliance falling.
- Do not place the appliance or power cord in walkways where it could pose a tripping hazard.
- Do not install the appliance or power cord in a way that they will be pinched during use or storage.
- Do not wind the power cable around the appliance during use or storage.
- Do not use the appliance without water.
- Never leave the appliance unattended when in use.
- Disconnect the appliance's power cord from the socket after use. Never pull the power cord to disconnect it; always grip the plug.
- Clean the water tank at least every 72 hours to prevent accumulated microbial growth.
- The appliance can also be used by children over 8 years old and persons with physical or mental limitations, or persons without experience or knowledge of how to use the appliance, provided they have been instructed on its safe use or are under appropriate supervision and understand the risks associated with it. Children should not play with the appliance. Children should not clean or maintain the device without supervision.

Technical information

Model	Ströme SPS-201A
Water tank capacity	5.5 l
Steam output	300 ml/h
Room size	20 to 25 m^2
Timer	1 to 12 hours
Automatic power off	Yes
Dimensions	27.4 × 20 × 20 cm
Weight	1.1 kg
Power cord length	150 cm
Voltage	220–240 V~ 50/60 Hz 1.0 A



Parts

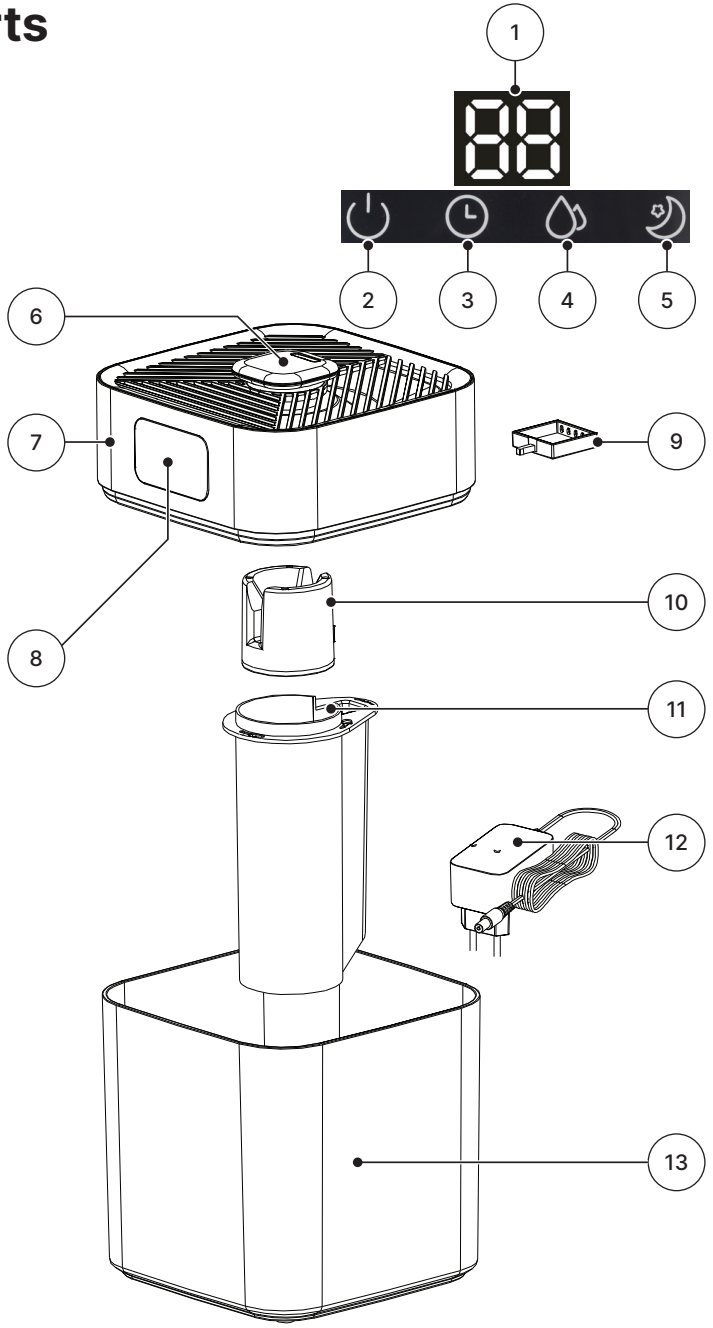

Display and control panel

1. Numeric display
2. Power button
3. Timer button
4. Power level button
5. Night mode button

Appliance

6. Steam nozzle
7. Water tank lid
8. Control panel
9. Fragrance container
10. Vapor sensor
11. Steam pipe
12. Power supply and cord
13. Water tank

How to use

Place of use

Choose a suitable place of use for the appliance. Make sure that

- The place of use complies with the safety instructions given in this user manual,
- It is easy for you to use the appliance and fill its water tank at the place of use,
- You have easy access to the electrical outlet where you plug the appliance's power cord.

Water and fragrance oil

Close the windows before use to ensure the appliance works as efficiently as possible.

1. Unplug the appliance from the power outlet before filling the water tank.
2. Lift the water tank lid off the appliance.

- Clean the water tank before first use or if 72 hours or more have passed since the last cleaning.

3. Place the steam sensor and steam pipe in position so that the steam pipe curves upwards from below the sensor. Insert the steam tube into the regulator in the sensor.
4. Pour clean tap water or bottled drinking water into the tank. Please note that the tank capacity is 5.5 liters. Do not exceed the tank capacity.
5. Close the water tank lid.

- You can add fragrance oil to the appliance's fragrance container:

1. Push the fragrance container inwards. The container opens with a pop-up switch.
2. Add a few drops of fragrance oil to the container.
3. Push the fragrance container back into the appliance until it locks into place.

- Note! Never add fragrance oil to the water.

General use

1. Plug the appliance's power cord into an accessible socket.
2. Press the power button on the control panel to switch on the device. The default setting is medium-speed steam production and alternating RGB lights.
3. If you want, you can manually adjust these appliance settings:

- Power level
- Timer
- Night mode
- RGB lighting

Check the appliance settings in the table on the next page.

The appliance will automatically switch off and beep when the water tank is empty. Unplug the power cord from the outlet and fill the water tank before continuing to use the appliance.

- Note! The appliance does not beep when night mode is active.

Settings

Setting	Explanation
Power level	You can choose slow, medium or fast steam output. Press the button on the control panel to choose the power level.
Timer	The device stops operating after the set time. Press the button on the control panel to turn on the timer. Long press the button to turn off the timer.
Night mode	The lighting and sound signals are off. Press the button on the control panel to turn night mode on and off.
RGB lighting	Long press the button on the control panel to turn the light on or off.

Maintenance, storage and recycling

Clean the appliance regularly according to these instructions. Do not use sharp objects, metal cleaning tools, or abrasive cleaners.

Cleaning the water tank



- If you use the appliance at least every three days, clean the water tank at least every 72 hours to prevent accumulated microbial growth.
- If you do not use the appliance at least every three days, pour the water out of the water tank after use and dry it thoroughly.
- Clean the inside surfaces of the water tank with a soft cloth. If limescale deposits are not removed with water alone, you can use a mild cleaner. Rinse off detergent residues from the water tank thoroughly.
- Clean the exterior surfaces of the water tank, lid, and appliance with a dry, soft cloth. If dirt has accumulated on the exterior surfaces, you can clean them with a mild detergent. Do not expose the electrical parts of the appliance to water.

Cleaning the steam sensor and pipe

1. Remove the steam sensor and steam tube from the appliance and clean them with a soft cloth and mild detergent.
2. Reinstall the steam sensor and steam tube after cleaning.

Storage

- Empty and dry the water tank before storing the appliance.
- Store the appliance in dry indoor environments at room temperature out of reach of children and pets.
- We recommend to store the appliance in its original package if you do not use it frequently.

Recycling

The device or its accessories must not be disposed of with regular household waste at the end of their life cycle. Take the device for recycling to the retailer or a local waste disposal facility responsible for recycling. For more information, contact your retailer or waste management company.



Verkkokauppa.com Oyj
Tyynenmerenkatu 11, 00220 Helsinki, Finland
https://asiakaspalvelu.verkkokauppa.com