
STRÖME

Gliding Grille 2 Pro

Tower Fan

OWNER'S MANUAL

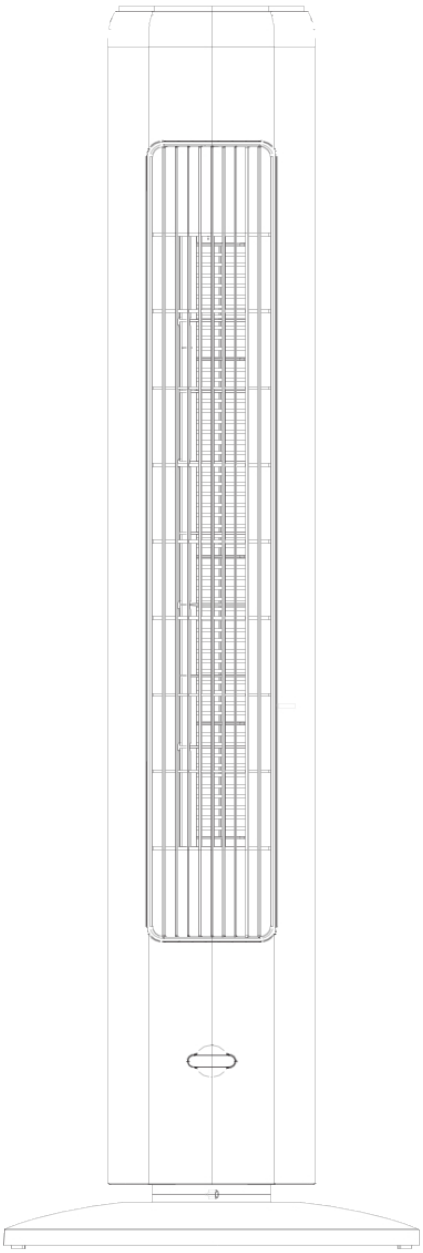

READ AND SAVE THESE INSTRUCTIONS

Note. The pictures in this manual are for reference only.

NOTE. Please read this manual carefully before using the device. Keep the instructions for future reference.

⚠ WARNING! Failure to follow the instructions may cause a fire hazard.

SAFETY INSTRUCTIONS

This device must be installed and used in accordance with the instructions. The device must not be modified in any way, as this may invalidate the warranty and create a safety hazard.

⚠ WARNING – The device must be installed so that you have unobstructed access to the power socket.

⚠ WARNING – If the electrical cord of the device is damaged, it must be replaced by an authorised service provider.

⚠ WARNING – Make sure children cannot push finger, other body parts or objects into the device.



⚠ WARNING – Do not cover.

⚠ WARNING – Do not use this device in small rooms occupied by persons who are unable to leave the room on their own, unless constant supervision is provided.

- Remove all protective plastic and labels from the device. Keep all packaging materials out of children's reach.
- The device is intended for use in dry indoor environments only. Ensure that the device is used within the temperature limits (0-40°C).
- The device is designed for domestic use only and should only be used in accordance with the instructions.
- Place the device on a solid, dry and level surface. Do not place the appliance on a soft surface (e.g. a sofa).
- Keep a minimum distance of 30cm between air intakes and walls and other objects, leaving at least 100cm free space in front. Keep the air intakes of the appliance away from people and animals.
- The device must not be located immediately below the power socket.
- This device is not intended for use with an external timer or a separate remote control system.
- Incorrect voltage will damage the equipment and may pose a risk of electric shock. Check that the mains voltage at the place of use is as indicated on the rating plate.
- Children under 3 years of age should be kept away from the device unless they are supervised at all times.
- Children over 3 and under 8 years of age are allowed to switch the appliance on/off if it is correctly installed, and if they are supervised or instructed in the safe use of the device and if they understand the risks involved. Children over 3 and under 8 years of age are not allowed to connect the appliance to the mains power supply, adjust or clean the appliance, or carry out user maintenance.
- The device may also be used by children over 8 years of age and persons who are physically or mentally incapacitated or have no experience or knowledge of how to use the device, if they have been instructed in the safe use of the device or are provided with the necessary supervision for safe use, and if they understand the risks associated with the device. Children should not play with the device. Children should not be allowed to clean or service the appliance without supervision.
- Do not expose the appliance or its power cord to fire, direct sunlight or other heat, excessive cold or corrosive substances. Do not expose the exterior of the appliance or the wiring to water or other liquids.
- Do not use the device in damp areas. Do not immerse the device in water or other liquids. Do not touch the appliance or the plug with wet hands.
- Do not use near stoves, fireplaces, ovens or other hot heat sources. Do not place open fires (e.g. candles) directly in front of the appliance.
- Do not place or use the appliance in a confined space near flammable, explosive or toxic substances.

- Keep fingers and other body parts, hair, jewellery and clothing away from the device's openings and moving parts.
- NOTE! The appliance may emit an odour for a short time after start-up. This is normal and does not affect the safety of use. If the smell does not disappear within a few minutes, or if smoke is emitted, the appliance should be switched off and sent for servicing.
- Do not leave the device operating unattended.
- Switch off and unplug the appliance before cleaning, servicing or moving it.
- Let the device cool down before handling and cleaning it.
- Clean the body of the device regularly to prevent dust accumulation. You can clean the surfaces of the body and the air intake and exhaust vents with a dry, soft cloth or by gently vacuuming. You can also gently vacuum to remove any dirt that has accumulated on the surface of the filter.
- Unplug the device and clean it before storing or taking a longer break from using it. The device must be stored in a dry place at room temperature.
- Do not use the device if it is damaged (e.g. if it has been dropped or has visible damage) or if it is not working properly. Do not use the appliance if the power cord or plug is damaged. Do not attempt to open the appliance or any part of it.
- Do not carry out any maintenance work that is not described in the user manual. If the appliance breaks down, take it to a dealer or an authorised service centre.
- Plug the appliance into an outlet with unobstructed access in case of an emergency. Make sure the power cord is not pinched, folded or knotted. Do not place the power cord under carpet, furniture, or other equipment. Position the power cord so that it does not create a tripping hazard. Do not use an extension cord.
- Do not disconnect the power cord by pulling on the cord, always pull from the plug.
- Use only attachments, accessories and filters approved by the manufacturer.
- The remote control works with a 1.5V AAA battery. Batteries must be purchased separately.
- Insert the batteries according to the polarity markings on the batteries and the battery case.
- Do not use old or different types of batteries together.
- Do not attempt to charge regular batteries.
- Do not use rechargeable batteries.
- If the battery has leaked, remove any liquid that may have leaked into the battery compartment and replace the batteries with new ones.
- Replace the batteries every three months or as needed.
- Remove the batteries when the device will not be used for a long period of time or when it is being stored.
- Remove the batteries from the product before disposing of it.
- Used batteries must be recycled correctly. Batteries must not be incinerated. Risk of explosion!

SPECIFICATIONS

Product model	Ströme Gliding Grille 2 Pro
Voltage & Frequency	220-240V 50Hz 40W
Maximum fan flow rate	7,34 m^3/min
Fan power input	38,20 W
Service value	0,19 (m^3/min)/W
Measurement standard (sv)	EN ISO 5801:2017
Standby power consumption	0,23 W
Off power consumption	0,00 W
Fan sound power level	59,62 dB(A)
Maximum air velocity	4,78 m/s
Oscillation	Yes, 60±6°
Ionization	Yes
Timer	Yes, 7h
Measurements (mm)	228 x 228 x 1084 mm

Other features include:


- 3 fan modes (natural/night/normal)
- A remote
- 3 fan power levels
- Remembers previously used settings
- Aromatherapy box that let's you freshen the air with nice scents


Package contents:

- Ströme Gliding Grille 2 Pro Tower Fan
- Remote (uses 2xAAA batteries, not included)
- User Guide

PRODUCT OVERVIEW

NOTE. All the pictures in this manual are for reference purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real product.

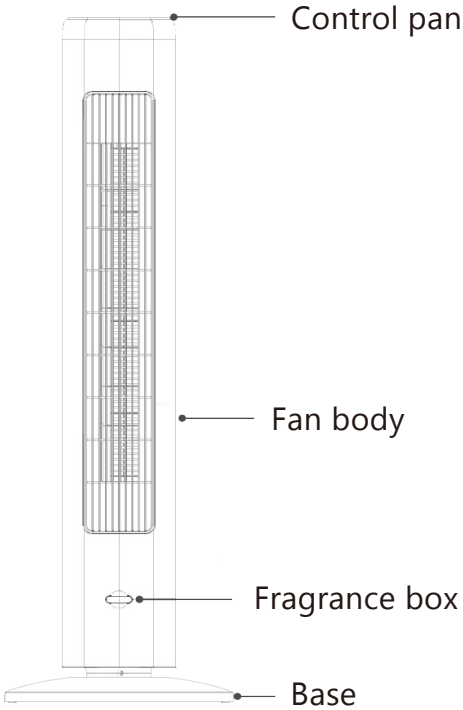



Remote Control



Instructions

ASSEMBLY INSTRUCTIONS

1. Take out the fan body and the spare parts from the box. Put the front base onto the rear base and join them together. (See Fig. 1)
2. Unlock the plastic nut from the fan body. (See Fig. 2)
3. Pass the power cord through the flute, then insert the fan body into the base.
4. Fix the fan body on the base with the plastic nut. (See Fig. 3)

Fig.1

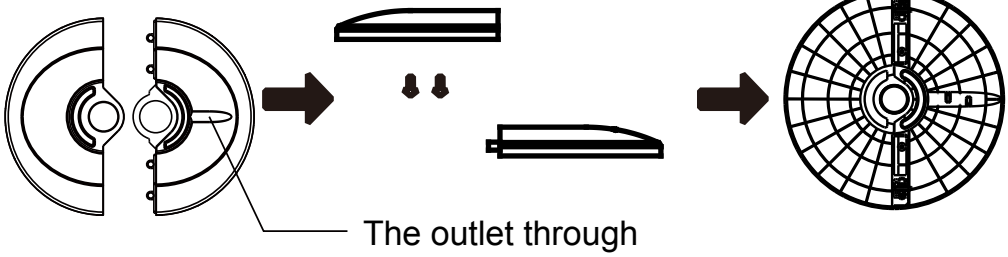


Fig.2



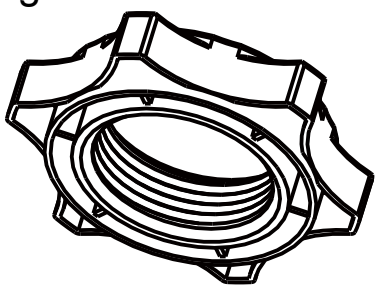


Fig.3

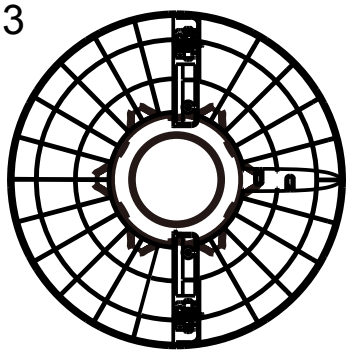

CONTROL PANEL & USER INSTRUCTIONS

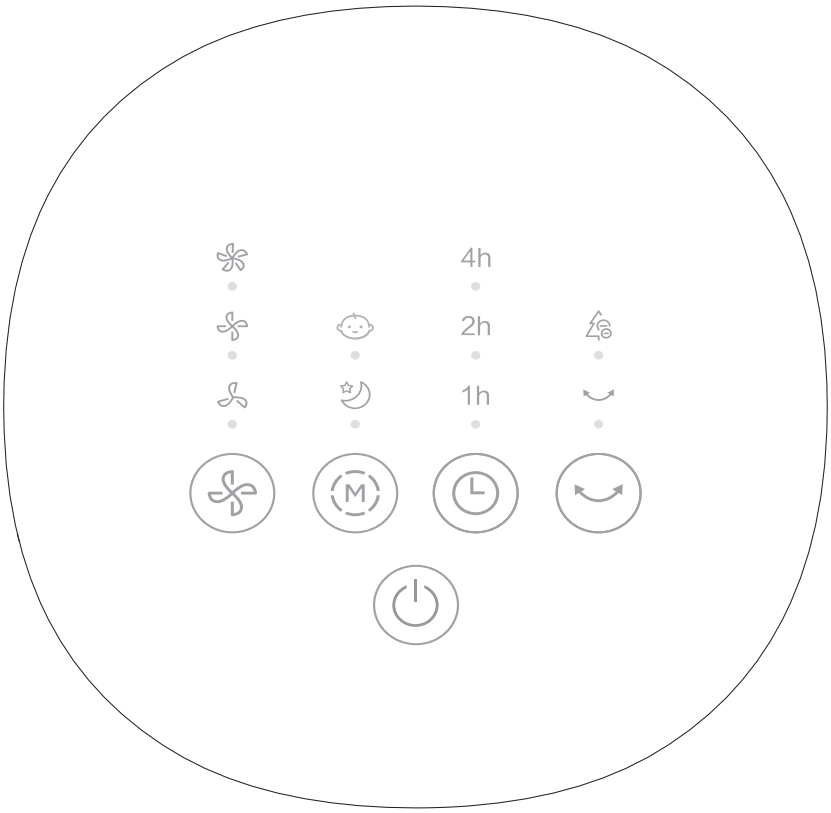

Power ON/OFF
Press to start the fan. Press again to put the fan on standby mode.

Wind adjustment
Press to adjust the wind speed between three different levels.

Change mode
Press to switch between different fan modes (natural/night/normal)

- Natural – Breezy wind that imitates "random" wind breezes outdoors.
- Night – A mode which slowly and automatically goes down to lower levels
- Normal – Standard fan mode that blows wind at the selected level

Timer
Set the timer to power off or power on the fan after a certain amount of time has passed. You can select the function to happen in 1-7h.

Oscillation
Press to start or stop the fan's movement.
Long press to turn off button press sounds.


Ionization
The device cleans the air in the room by charging the air particles with a slight negative charge. This way they get caught in the filters more efficiently.

Forced shutdown function
If the machine keeps running for 15h without any user operation, it will automatically shut down.

Aromatherapy Box
You can use nice fragrances to freshen up the air inside your house.

REMOTE CONTROL

- The remote control should normally be used within 5m of the product, and from the front side of the device from around 30° angle.
- The remote uses 2x AAA batteries (not included). Do not use rechargeable batteries, and do not try to charge standard batteries.
- Batteries have to be recycled properly, separately from standard household waste.

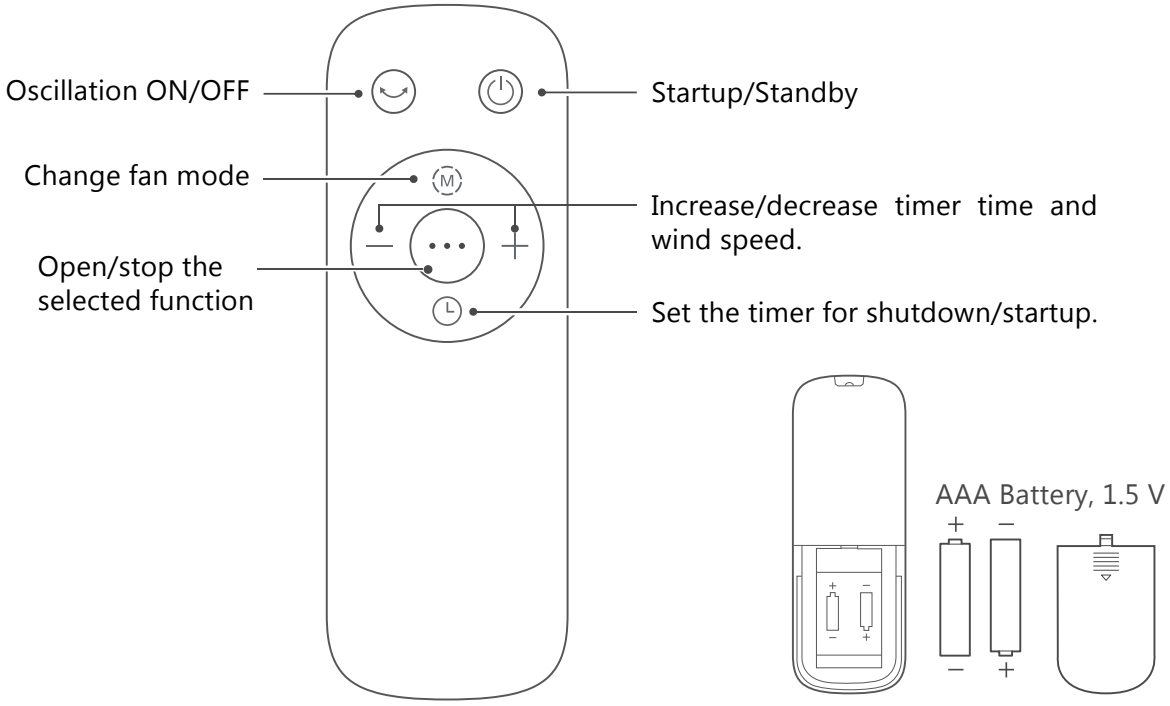

CLEANING AND MAINTENANCE

The fan requires only a little maintenance. Do nyt try to fix the device by yourself. Instead contact your resaler for service or another qualified service center.

- Before cleaning, moving the device, or any other assembly, the fan must be unplugged from the power source.
- To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
- Wipe exterior parts with a soft cloth and use a mild detergent if needed. Thoroughly wipe off any soap residue after cleaning.
- Do not use abrasive detergents or solvents, or thinner and gasoline.
- Make sure that water and liquid does not get inside the interior of the device.

TROUBLESHOOTING

Using the device is simple and rarely leads to errors. However, sometimes the operation of your appliance may lead to errors or malfunctions. Here are some of the most common ones, and solutions for them. In case your problem with the device is not listed here, please contact your resaler or authorized service provider.

- The fan doesn't work properly after installation – Check that the power cable is plugged in properly and that the fan receives power.
- The remote does not work – Check whether the batteries are properly installed and that they have power, and make sure you use the remote closer than 5m away from the device and preferrably from the front side of the fan.

STRÖME

