STRÖME

Kitchen machine – Model: KM512

User manual in English



CONTENTS

Safety instructions	3
Parts	5
How to use	6
Maintenance, storage and recycling	8
Technical information	9

Safety instructions

- Read the instructions and keep them for future reference. By following these safety instructions, you can use the appliance safely and prevent damage to the appliance or injury to persons.
- This appliance is a stand mixer intended for household use. The appliance is used for food preparation. Do not use the appliance in other environments or for other purposes.
- Before use, ensure that the package contains all parts listed in the technical specifications and that the appliance parts are intact. Do not use the appliance if any parts are missing or damaged.
- Do not attempt to repair the appliance parts yourself. Take the appliance to the retailer or an authorised service centre if any parts are faulty.
- Remove all protective plastics and stickers from the appliance before using it.

SAFE HANDLING OF ELECTRICAL EQUIPMENT

- Use the appliance only in dry indoor environments at room temperature.
- Do not expose the appliance to water or other liquids.
- Do not expose the appliance to fire, direct sunlight, or other heat sources, excessive cold, or corrosive substances.
- Make sure that the power cord doesn't get damaged during installation. If the power cord gets damaged, contact your retailer or an authorised service centre. Never use the appliance if its power cord is defective or damaged.
- Incorrect voltage will damage the appliance and may cause electric shock. Check the required voltage for the appliance on the rating label. Use the appliance only in places where the required voltage is available.
- Do not use the appliance with a separate remote control or timer system.
- Plug the appliance’s power cord into an accessible socket.
- Place the device on a flat, stable surface.
- Do not let the power cord hang over the edge of high surfaces during use or storage to avoid the device falling.
- Do not place the appliance or power cord in walkways where it could pose a tripping hazard.
- Do not install the appliance or power cord in a way that they will be pinched during use or storage.
- Do not wind the power cord around the appliance during use or storage.
- Never leave the appliance unattended when in use.
- Disconnect the appliance’s power cord from the socket after use. Never pull the power cord to disconnect it; always grip the plug.


USING THE APPLIANCE


- The appliance has moving parts that can cause personal injury. Do not touch moving parts when the appliance is running.
- Keep your hair, clothing and accessories away from moving parts of the appliance during use.
- Do not allow children or pets near the appliance during use.
- The appliance can also be used by children over 8 years old and persons with physical or mental limitations, or persons without experience or knowledge of how to use the appliance, provided they have been instructed on its safe use or are under appropriate supervision and understand the risks associated with it. Children should not play with the appliance. Children should not clean or maintain the appliance without supervision.
- Do not prepare hot ingredients in this appliance. Allow the hot ingredients to cool before placing them in the bowl.
- Prepare up to 1000 grams of ingredients at a time.
- Do not start preparing the ingredients at full power, so that they do not splash out of the bowl. Gradually increase the power during the processing of the ingredients.

CLEANING THE APPLIANCE

- Read the maintenance instructions in this user manual before cleaning.
- Unplug the appliance before cleaning.
- Remove the dough hook, beater and whisk before cleaning.
- Clean all parts of the appliance thoroughly before using it for the first time.

Parts

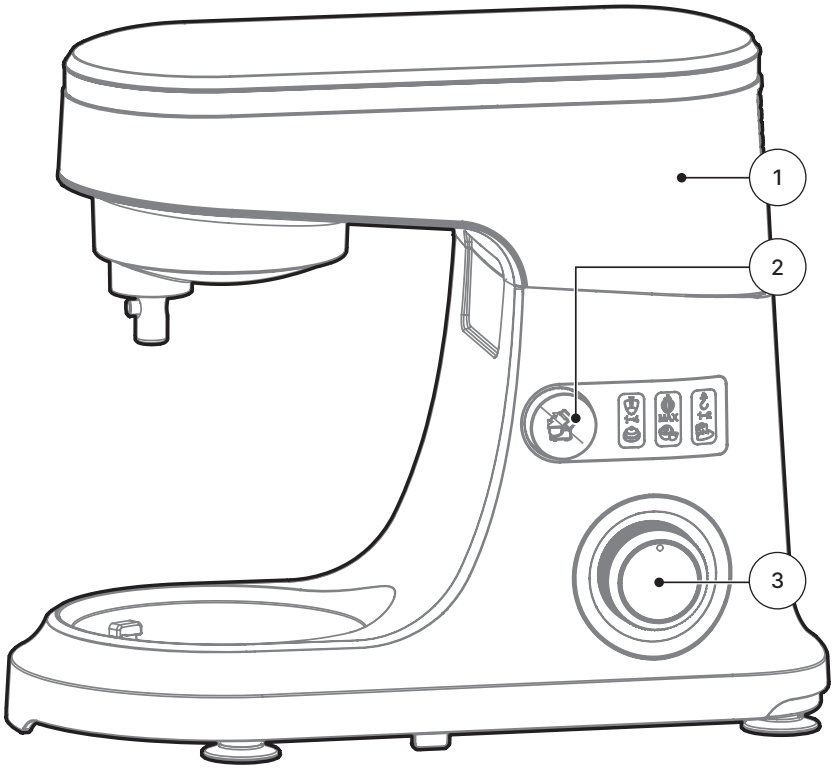

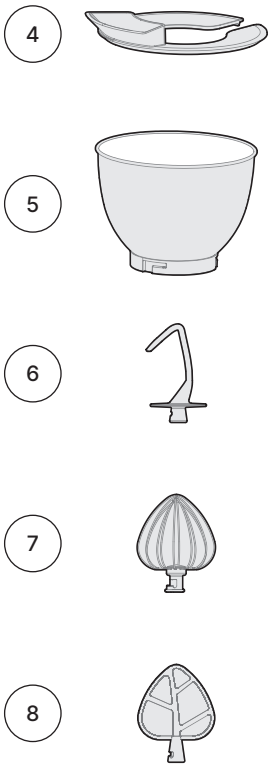

1. Body
2. Locking button
3. Power control (levels 1 to 6)
4. Splash guard
5. Bowl
6. Dough hook
7. Whisk
8. Beater

How to use


USAGE CONSIDERATIONS

- Before using the appliance for the first time, clean its parts according to the cleaning instructions in this user manual.
- The appliance has an automatic power off function. The appliance shuts down automatically after 15 minutes of continuous use.
- Start by processing the ingredients on low power and gradually increase the power so that the ingredients do not splash out of the bowl. Always use a splash guard over the bowl.

GENERAL USE

1. Always make sure that the appliance is unplugged before use.
2. Adjust the position of the top of the appliance by pressing the locking button on the front of the appliance.
3. Turn the top of the appliance upright.
4. Place the bowl on the base and turn it clockwise to secure it in place.
5. Attach a part to the shaft at the top of the appliance. Push the part as deep as possible and turn it counter-clockwise to hold it in place.
6. Lower the top of the appliance back to the horizontal position and slide the splash guard over the bowl.
7. Plug the appliance's power plug into an accessible electrical outlet.
8. After use, set the power control to 0 and unplug the power plug from the socket.
9. Slide the splash guard off the bowl.
10. Turn the top of the appliance upright by pressing the locking button on the front of the appliance.
11. Remove the mixing piece from the shaft by first pushing it upwards and then turning it clockwise.
12. Remove the bowl from the base by first turning it counter-clockwise and then lifting it upwards.

1

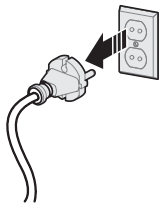

2




3




4




5

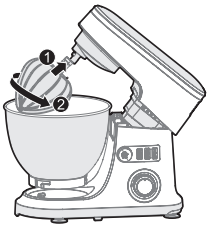


6

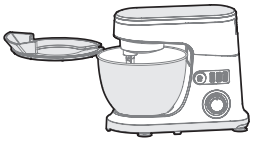


7

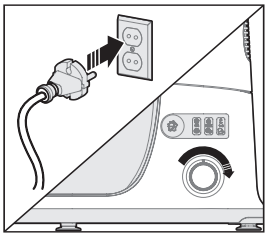


8

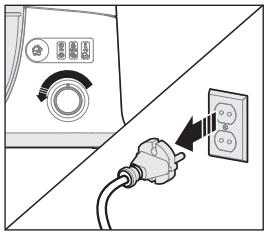


9

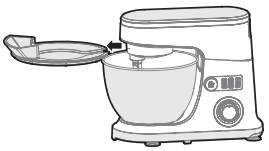


10

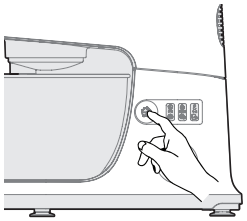

11

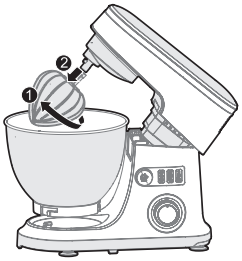




12

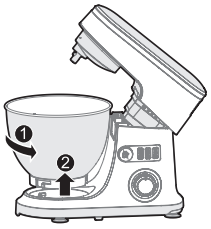

Maintenance, storage and recycling

MAINTENANCE

- Clean the body of the appliance with a dry, soft cloth. Do not use water or other detergents.
- Clean the dough hook and beater by hand with a damp cloth or a dish brush and dishwashing liquid. Do not wash these parts in the dishwasher.
- Clean the whisk, bowl and splash guard by hand with a damp cloth or a dish brush and dishwashing liquid. You can also wash these parts in the dishwasher.
- Dry the parts thoroughly after cleaning.

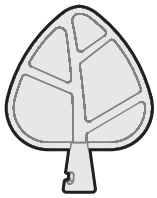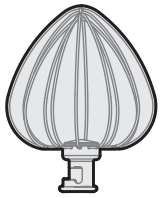Part		Cleaning method
Body		• Hand cleaning • Dry, soft cloth
Dough hook		• Hand cleaning • Damp cloth or dish brush • Dishwashing liquid
Beater		• Hand cleaning • Damp cloth or dish brush • Dishwashing liquid
Whisk		• Hand cleaning or dishwasher • Damp cloth or dish brush • Dishwashing liquid
Bowl		• Hand cleaning or dishwasher • Damp cloth or dish brush • Dishwashing liquid
Splash guard		• Hand cleaning or dishwasher • Damp cloth or dish brush • Dishwashing liquid

STORAGE

Always store the appliance

- at room temperature,
- in dry indoor conditions,
- out of reach of children and pets.

Store the appliance in its original package if you do not use it regularly.

RECYCLING

The appliance or its accessories must not be disposed of with regular household waste at the end of their life cycle. Take the appliance for recycling to the retailer or a local waste disposal facility responsible for recycling. For more information, contact your retailer or waste management company.



Technical information

Model	Ströme KM512 stand mixer
Voltage	220–240 V~ 50–60 Hz
Power	1200 W
Power consumption in off mode	0,0 W
Time after which the device automatically switches to off mode	0 minutes
Number of power levels	6
Appliance dimensions	37 × 12 × 31.2 cm
Bowl diameter	22.3 cm
Package contents	Stand mixer, dough hook, beater, whisk, bowl, splash guard and user manual



Verkkokauppa.com Oyj
Tyynenmerenkatu 11, 00220 Helsinki
https://asiakaspalvelu.verkkokauppa.com